

#	Finish / Appearance	Name	Order of Use	How
1	Soft, satin matte	Polishing Buffing Wheel	One red buffing wheel	Use at slow speed
2	Medium matte	9/16" Radial Bristle Discs	Red, Blue, Pink, Green	Most folks use red only.
3	Shiny with patina in deep parts	7/8" Radial Bristle Discs	Yellow, Red or Black, Pink, Green	Can use all four in order for a high shine or stop at red
4	Shiniest with darker patina	Silicone Polishing Wheels	White, Black, Blue, Pink	White and black are often used for 'repairs'


1.



2.



3.

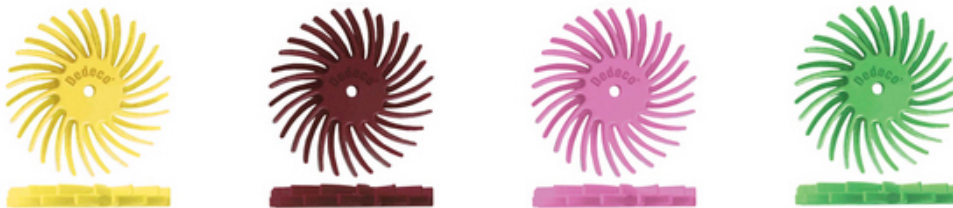

4.



**If you don't like your finish, re-patina and start again.**